
# zencontrol

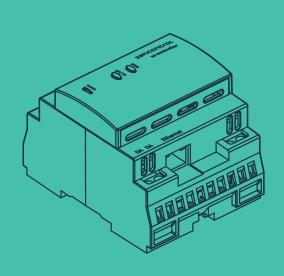

# Product range

Order code	<b>de</b> Description	
zc-controller	DALI-2 application controller and Ethernet DALI gateway	

# **Specifications**

Supply voltage	230 V ~ 50 Hz		
Control system	DALI-2		
DALI line current	2 mA		
Ethernet	10/100 Ethernet port		
Wiring	1 - 4 mm <sup>2</sup> Strip 6 - 7 mm		
Operating temperature	0 to 45°C		
Material	PC		
Classification	Class II		
Ingress protection	IP20		


# Safety information

- This product must only be installed by a licensed electrician.
- Before commencing installation turn off and isolate the electrical supply.
- There are no user serviceable parts, attempting to service any part of the product will void the warranty
- DALI is not SELV and as such should be treated as LV.
- As the installer, it is your responsibility to ensure you comply to all relevant building and safety codes. Refer to application standards for the relevant rules.
- When the installation is complete, leave this manual with the building's owner for future reference.

#### **Dimensions**

Mounting options	DIN ra	il (35 mm)	
Dimensions	92.5/	72 / 62 mr	m
O O O O O O	To the control of the	72	2 62
	45		92.5

# System overview

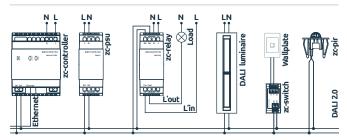


# **Installation**


Remove the product from the box and inspect it for any damage. If you believe the product to be damaged or otherwise unsound, do not install the product. Please pack it back into its box and return it to the place of purchase for replacement.

#### If the product is satisfactory, proceed with the installation:

- 1 Ensure safety warnings are adhered to.
- 2 Mount the DALI application controller on DIN rail inside a mains rated enclosure as shown in fig 1. To remove from DIN rail, release the clip mechanism with a flat blade screw driver, as per fig 2.
- 3 Wire the DALI application controller as per fig 3.

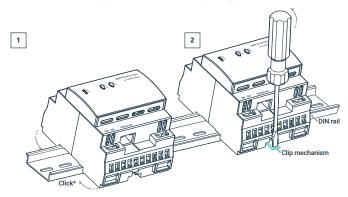

# Wiring diagram

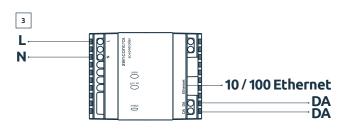

Wire preparation



# Accessories range

Order code	Description
zc-psu	DALI-2 power supply, DIN mount

#### **Status LEDs**


LED	State	Meaning
Status	Green - On	Unit is powered
On / off & reset	Green - Alternating flash	Bootload in process
On / off & reset	Yellow - Synchronised flash	Start up in process
On / off & reset	Green Yellow - Alternating	Bootup complete
On / off	Green - Flash / flicker	DALI activity
On / off	Red - Flash	DALI failure

**Note:** DALI failure indicates the DALI line has a short, is overloaded, is disconnected or is not powered

# **Button actions**

Button	Action	Function
On / off	Short press	Toggles lights (max / off)
On / off	5 second press	Toggles identify function
Reset	1 - 2 seconds press	Force Cloud reconnect
Reset	3 - 10 second press	Reboot
Reset	11 - 15 second press	Factory reset

# **Indicators**

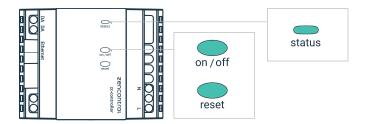

# **Notice**



For more information on compliant software see our website **zencontrol.com**